

WIRED REMOTE CONTROLLER

OPERATION MANUAL



BRC1E62

- Thank you for purchasing this product.
- This manual describes safety precautions required for the use of the product.

Read this manual carefully and be sure you understand the information before using the product.

Keep this manual where it is readily accessible after reading it through. If another user operates the product in the future, be sure to hand over this manual to the new user.

Refer to the operation manuals attached to the indoor and outdoor units, etc.

Contents

Notices	Safety Precautions
	– Items to be Strictly Observed – 2
	Button Location and Descriptions..... 5
	Names and Functions..... 7

Basic Operation (Use of Direct Buttons)	Cool/Heat/Auto/Fan Operation 10
	Dry Operation 14
	Setback..... 16
	Ventilation Operation 17
	Setting the Cool/Heat Selection Eligibility..... 18
	Key Lock 20

Quick Reference Main Menu	Main Menu Items 21
----------------------------------	--------------------------

Menu Manipulation	Manipulating the Main Menu Screen..... 24
	Individual Airflow Direction 25
	Quick Start (SPLIT system only) 28
	Ventilation 30
	Energy Saving Options..... 32
	Schedule..... 40
	Filter Auto Clean..... 46
	Maintenance Information 47
	Configuration 48
	Current Settings..... 52
	Clock & Calendar..... 53
	Language..... 56

Maintenance	Reset Filter Indicator 57
	Cleaning of Remote Controller 58

Reference Information	Malfunction (Error) Code Display 59
	After-sales Service 60

Safety Precautions – Items to be Strictly Observed –

This product is not intended for use by children or infirm persons without supervision.
Children should be supervised to ensure that they do not play with the product.

Read the safety precautions carefully for the proper use of the product.

- This manual classifies the precautions into WARNINGS and CAUTIONS.
Be sure to follow all the precautions below: They are all important for ensuring safety.

 WARNING	Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
 CAUTION	Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.


 WARNING
• Do not install the remote controller by yourself. Improper installation may result in electric shocks or a fire. Consult your local dealer.
• Do not modify or repair the remote controller. It may result in electric shocks or a fire. Consult your local dealer.
• Do not relocate or reinstall the remote controller by yourself. Improper installation may result in electric shocks or a fire. Consult your local dealer.
• Do not use flammable materials such as hairspray or insecticide near the product. It may result in electric shocks or a fire.
• Do not wipe the product with benzine, thinner, chemical dustcloth, etc. The product may get discolored or the coating peeled off. The use of organic solvents may cause cracking of the product, electric shocks or a fire.



CAUTION

- **Do not allow children to play with the remote controller.**
Accidental operation by children may result in health impairment.
- **Do not disassemble the product.**
Touching the interior parts may result in electric shocks or a fire.
Consult your local dealer for internal inspections and adjustments.
- **Do not press the button of the remote controller with a hard, pointed object.**
The remote controller may be damaged.
- **Do not pull or twist the electric wire of the remote controller.**
It may cause the unit to malfunction.
- **Do not operate with wet hands to avoid electric shocks or a fire.**
- **Do not wash the remote controller.**
It may cause electric leakage and result in electric shocks or a fire.
- **Do not locate the remote controller wherever there is a risk of wetting.**
If water gets into the remote controller there is a risk of electric leakage and damage to electronic components.
It may result in electric shocks or a fire.

Button Location and Descriptions

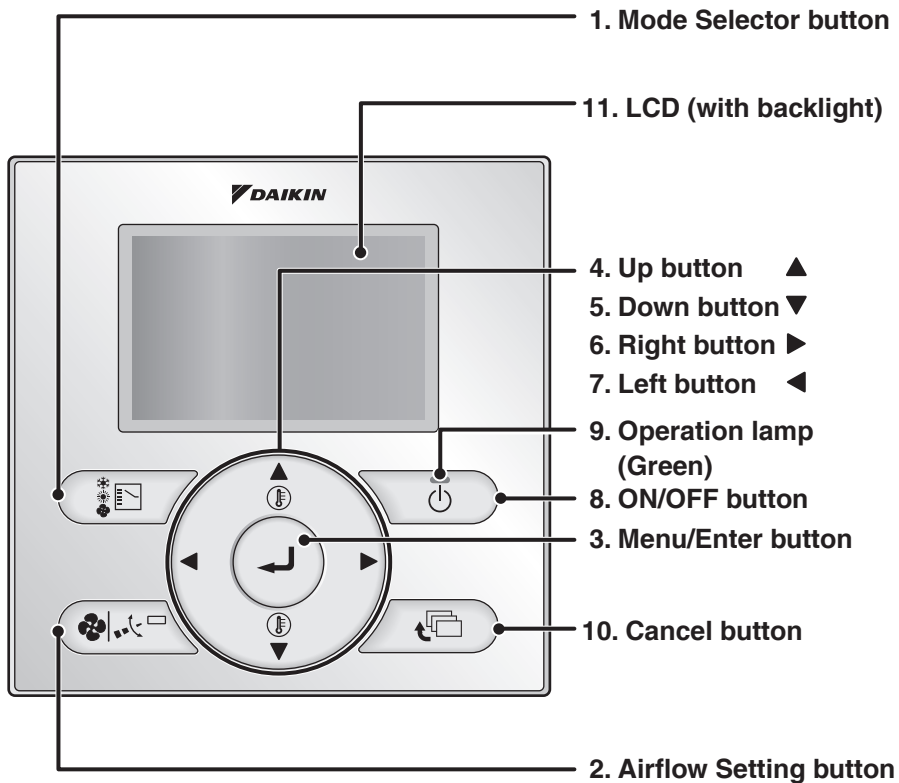

Basic operations (i.e., ON/OFF, Operation Mode, Airflow Rate (Air Volume/Fan Speed), Airflow Direction and Set Temperature) are manipulable directly by the above button.

Advanced settings are manipulable from the Menu screen displayed by the Menu/Enter button.

NOTE

- Do not press the buttons on the remote controller with a hard, pointed objects. Otherwise, the remote controller may be damaged or malfunction.

1. Mode Selector button

- Use to select the operation mode of your preference. **(Refer to page 10.)**
* Available modes vary with the connecting model.

2. Airflow Setting button

- Used to indicate the Airflow Rate (Air Volume/Fan Speed)/Airflow Direction screen. **(Refer to page 11.)**
* Available fan speed and airflow direction vary with the connecting model.

3. Menu/Enter button

- Used to indicate the Main Menu.
(Refer to page 21 for the menu items.)
- Used to enter the setting item selected.

4. Up button “▲”

- Used to raise the set temperature.
- Use to highlight the item above the current selection.
(The highlighted items will be scrolled continuously when the button is kept pressed.)
- Used to change the item selected.
* Be sure to press the part with the symbol “▲”

5. Down button “▼”

- Used to lower the set temperature.
- Use to highlight the item below the current selection.
(The highlighted items will be scrolled continuously when the button is kept pressed.)
- Used to change the item selected.
* Be sure to press the part with the symbol “▼”

6. Right button “▶”

- Used to highlight the next items on the right-hand side.
- Display contents are changed to next screen per page.
* Be sure to press the part with the symbol “▶”

7. Left button “◀”

- Used to highlight the next items on the left-hand side.
- Display contents are changed to previous screen per page.
* Be sure to press the part with the symbol “◀”

8. ON/OFF button

- Press this button and system will start.
- Press this button again and system will stop.

9. Operation lamp (Green)

- This lamp lights up during operation.
- This lamp blinks if a malfunction occurs.

10. Cancel button

- Used to return to the previous screen.

11. LCD (with backlight)

- The backlight will be lit for approximately 30 seconds by pressing any operation button. Press the button while the backlight is lit. (Excluding the ON/OFF button)
- If 2 remote controllers are used to control a single indoor unit, the backlight of the remote controller accessed first will be lit.

Names and Functions

Basic Screen

- Basic screen are two types of Standard display screen and Detailed display screen. The Standard display screen is set by default.
- To switch to the Detailed display, select the "Detailed" in the Main Menu. (Refer to page 49.)
- The contents on the screen vary with the operation mode of the connecting model. (The following display will appear when the air conditioner is in Automatic operation.)

Standard display screen

11.Changeover Under Control

10.Centralized Control

1.Operation mode

3.Airflow Direction

(Displayed only when the air conditioner is in operation.)

2.Airflow Rate (Air

Volume/Fan Speed)

7.Ventilation/Air purifying

12.Setback


9.Timer Enabled

8.Key Locked

4.Set/Setback Temperature display

5.Defrost/Hot start


6.Message

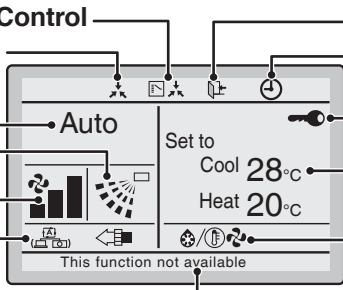

<Standard display example>

Detailed display screen

- The clock, and selectable display items appear on the detailed display screen in addition to the items appearing on the standard display screen.

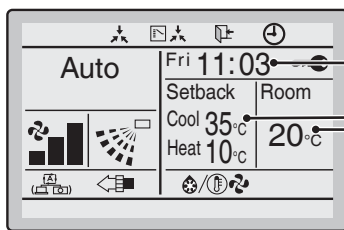

<Detailed display example 1>

13.Clock (12/24 hours time display)

4.Set/Setback Temperature display


14.Selectable Display Item (with room temperature selected)

2.Airflow Rate

(Air Volume/Fan Speed) is not appear (No airflow rate control function)

3.Airflow Direction

is not appear (No airflow direction function)

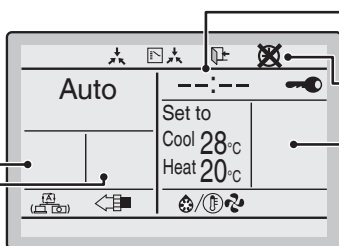

<Detailed display example 2>

13. Clock

(No clock setting)

15. Timer Disabled/Reset Clock

14. Selectable Display Item

(No selectable display item selected)

1. Operation Mode

- Displays the present operation mode, “Cool”, “Heat”, “Vent”, “Fan”, “Dry” or “Auto”.

2. Airflow Rate (Air Volume/Fan Speed)

- Displays the airflow rate that is set for the indoor unit.
- The airflow rate will not be displayed if the indoor unit does not have airflow rate control function.

3. Airflow Direction “”

- Displayed when the airflow direction and swing are set (Refer to page 12).
- This icon is not displayed if the indoor unit does not have a function to set airflow directions.

4. Set/Setback Temperature display

- When the air conditioner is turned on, “Set to” indicates the set temperatures that are set for the air conditioner.
- When the air conditioner is turned off, “Setback” indicates the setback temperatures that are set for the air conditioner.

5. Defrost/Hot start “” (Refer to page 13.)

Displays if the Defrost/Hot start operation is active.
If ventilating operation “” is displayed:

- Displayed when a Heat Reclaim Ventilator is connected.
For details, refer to the Operation Manual of the Heat Reclaim Ventilator.

6. Message

The following messages are displayed.

“This function not available.”

- Displayed for a few seconds when an operation button is pressed and the indoor unit does not have the corresponding function.

- If a number of indoor units are in operation, the message will appear only if none of the indoor units is provided with the corresponding function, i.e., the message will not appear if at least one of the indoor units is provided with the corresponding function.

“Error: Push Menu button”

“Warning: Push Menu button”

- Displayed if an error or warning is detected (Refer to page 59).

“Quick Start” (Split system only)

- Displayed if the quick cooling/heating function is turned on (Refer to page 28).

“Time to clean filter”

“Time to clean element”

“Time to clean filter and element”

- Displayed when the time to clean the filter or element has come (Refer to page 57).

7. Ventilation/Air Purifying

- Displayed when a Heat Reclaim Ventilator is connected.
- **Ventilation Mode icon.** “”
These icons indicate the current ventilation mode (Heat Reclaim Ventilator only) (AUTOMATIC, ENERGY RECLAIM VENTILATION, BYPASS).
- **Air purifying icon** “”
This icon indicates that the Air Purifying unit (optional accessory) is in operation.

8. Key Locked “” (Refer to page 20.)

- Displayed when the key lock is set.

9. Timer Enabled “” (Refer to page 38 and 45.)

- Displayed if the Schedule timer or OFF timer is enabled.

10. Centralized Control “”

- Displayed if the system is under the management of centralized control equipment (optional accessories) and the operation of the system through the remote controller is prohibited.

11. Changeover Under Control “ ”

(VRV only)

- Displayed if the remote controller has no cool/heat selection eligibility. (Refer to page 18).

12. Setback “” (Refer to page 16.)

- The setback icon blinks when the air conditioner is turned on under the setback control.

13. Clock (12/24 hours time display)

- Displayed when the clock is set (Refer to page 53).
- If the clock is not set, “-- : --” will be displayed.

14. Selectable Display Item


- Displayed when the detailed display is selected (Refer to page 49).
- No detailed items are selected by default.

15. Timer Disabled/Reset Clock “”

- Displayed when the clock needs to be reset.
- The schedule timer function will not work unless the clock is reset.

Basic Operation (Use of Direct Buttons)

How to follow the operation manual

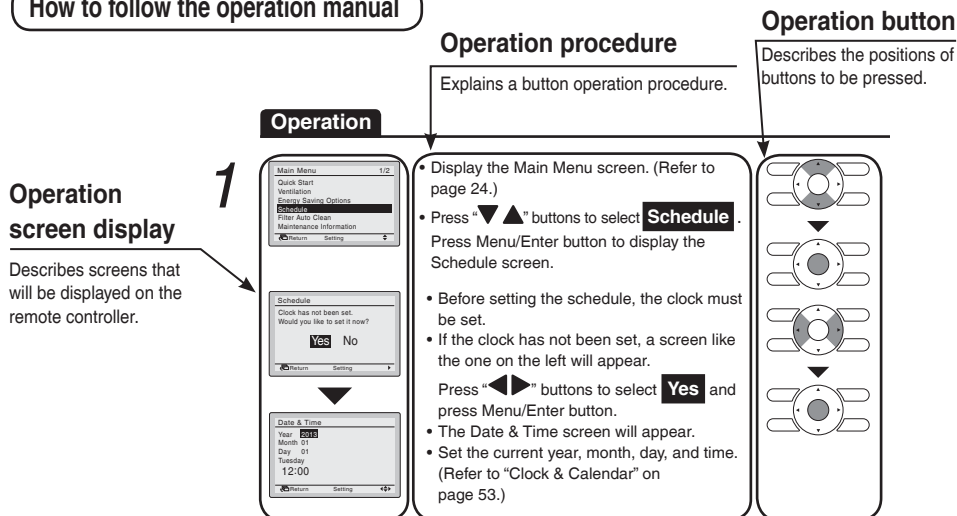


Cool/Heat/Auto/Fan Operation

Preparation

- For mechanical protection purposes, turn on the power to the air conditioner at least 6 hours before starting the operation.

Operation

1

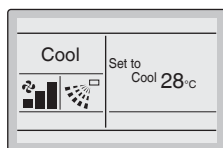

Basic screen

- Press Mode Selector button several times until the desired mode, Cool, Heat, Fan or Auto is selected.



- * Unavailable operation modes are not displayed.
- * Only the Cool or Fan mode can be selected if the air conditioner is a cooling only model.

Note

- The cooling or heating mode cannot be selected if the icon "☐" (Changeover Under Control) is displayed on the remote controller. Refer to page 18 if the icon "☐" display blinks.


2



- Press ON/OFF button.
The Operation lamp (green) will be lit and the system will start operating.



3

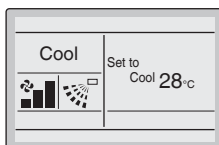


- The set temperature will increase by 1°C when “▲” button is pressed and decrease by 1°C when “▼” button is pressed.




* No temperature settings are possible while operating in Fan mode.

4

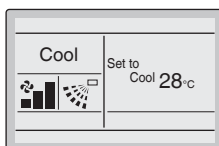


< Airflow Rate (Air Volume/Fan Speed) or Airflow Direction Setting >

- Press Airflow setting button.
- To select Air volume or Direction setting, press “◀▶” buttons.

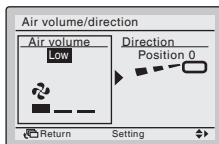


5

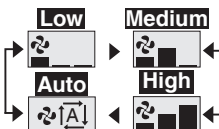

<Airflow Rate Adjustment>


- With Air volume selected, set the desired airflow rate from **low**, **Medium**, **High** or **Auto** using the “▼▲” buttons.
- * Depending on the type of indoor unit, the adjustment levels may be two levels of **low** and **High** or three levels of **low**, **Medium**, and **High**.
- * For equipment protection purposes, the indoor unit may control airflow rate automatically.
- * According to the room temperature, the indoor unit may control airflow rate automatically. The fan may stop operating, which, however, is not a failure.
- * It may take time until a change of the airflow rate is completed.
- * In **Auto** setting, the airflow rate is adjusted automatically according to set temperature and room temperature. In Fan mode, the airflow rate setting is always at High.



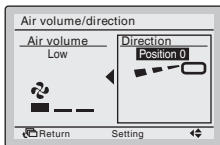

<Airflow Direction Setting>

- With Direction selected, set the desired airflow direction from, **Position 0**, **Position 1**, **Position 2**, **Position 3**, **Position 4**, **Swing**, and **Auto** using the “▼▲” buttons.

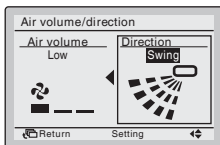


Airflow direction setting (up/down)

Note

- Airflow direction appears on the screen as below.




 Up/down direction



Left/right direction


- 0 : Position 0
- 1 : Position 1
- 2 : Position 2
- 3 : Position 3
- 4 : Position 4

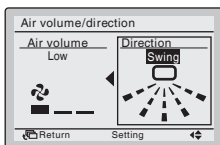

Airflow direction setting (left/right)

- When you set one of positions 0 to 4, the airflow direction flap stay in a fixed position.
- Selecting **Swing** will cause the airflow direction flap to swing position 0 to 4. For the swing setting only, all positions will be displayed.
- Setting **Auto** will varied airflow direction by room temperature and the presence or absence of the person. However, in Fan mode, the airflow direction flap will be to position 0. (This function may not be available depending on the type of indoor unit.)

 - Press Menu/Enter button to confirm the settings and return to the Basic screen.



Movement of airflow direction flap (blade)

Under the operation conditions shown below, airflow direction is controlled automatically. Actual operation may thus be different from what is displayed on the remote controller.

Operation condition

- Room temperature is higher than the set temperature (in Heat/Auto mode). (Discharge horizontally so that it does not discharge directly toward your body.)
- When the air conditioner goes into Heating Operation or Defrost Operation (in Heat/Auto mode). (Discharges horizontally to avoid a cold draft for the room occupants.)
- Under continuous operation with the airflow discharges horizontally (in Cool/Auto mode). (Discharges in the automatic set direction for a period of time to prevent condensation on the horizontal flap.)
- Under continuous operation with the airflow discharges downward (in Cool/Auto mode). (Discharges in the automatic set direction for a period of time to prevent condensation on the horizontal flap.)

6



- When the ON/OFF button is pressed again, the air conditioner will stop operating and the Operation lamp will turn off.



* When the air conditioner is stopped while in the Heating Operation, the fan will continue to operate for approximately 1 minute to remove residual heat from the indoor unit.

Note

- To prevent water leakage or system failure, do not turn off the power immediately. Wait at least 5 minutes for the drain pump to finish draining residual water from the indoor unit.

Characteristic of Cooling Operation (in Cool/Auto mode)

- When operating continuously at horizontally or downward airflow direction, air blows in the automatically set direction for a period of time to prevent condensation on the horizontal flap.
(The remote controller displays the airflow direction that is set.)
- If the Cooling Operation is used when the room temperature is low, frost forms on the heat exchanger of the indoor unit.
This can decrease the cooling capacity. In this case, the air conditioner automatically switches to the Defrost Operation for a while.
During the Defrost Operation, the low airflow rate or a gentle wind is used to prevent the discharge of melt water.
(The remote controller displays the airflow rate that is set.)
- When the outdoor air temperature is high, it takes some time until the room temperature reaches the set temperature.

Characteristics of Heating Operation (in Heat/Auto mode)

Starting Operation

- Heating Operation generally requires a longer time to reach the set temperature compared with Cooling Operation.
It is recommended to start operating in advance by utilizing the timer.

The air conditioner automatically controls the following operation to prevent the reduction of heating capacity and space comfort.

Defrost Operation (Frost removal operation for the outdoor unit)

- The air conditioner will automatically go into Defrost Operation to prevent frost accumulation at the outdoor unit and loss of heating capacity.
- The indoor unit fan will stop, and “❄️/🔥❄️” (Defrost/Hot start) will be displayed on the remote controller.
- The air conditioner will return to normal operation after approximately 6 to 8 minutes (Max 10 minutes).

Hot start

- When the air conditioner goes into Heating Operation or Defrost Operation, the indoor unit fan will stop in order to prevent a cold draft.
(In that case, “❄️/🔥❄️” (Defrost/Hot start) will be displayed on the remote controller.)

Regarding outdoor air temperature and heating capacity

- The heating capacity will drop with a decrease in outdoor air temperature.
If the heating effect is insufficient, it is recommended to use another heating appliance in combination with the air conditioner.
(When a combustion appliance is used, ventilate the room regularly.)
Do not use the combustion appliance in places where the combustion appliance is exposed to the wind from the air conditioner.
- This air conditioner is a hot air circulation type to warm the whole room. Therefore, it takes some time for the room to become warm after the system starts operating.
When the room temperature exceeds the set temperature, the indoor unit discharges a gentle breeze (switches to gentle wind). The airflow direction becomes horizontal.
(The remote controller displays the airflow rate and airflow direction that are set.)
- If the hot air stays around the ceiling and your feet feel cold, the use of a circulator is recommended.
For details, consult your local dealer.


Dry Operation

Preparation

- For mechanical protection purposes, turn on the power to the air conditioner at least 6 hours before starting the operation.
- Dry mode may not be selected if the remote controller has no eligibility to select cooling/heating mode (Refer to page 19 for details).

Operation

1

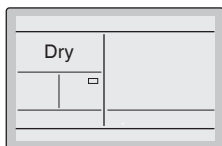

- Press Mode Selector button several times until Dry mode is selected.



* Dry mode may not be available depending on the type of indoor unit.

2



- Press ON/OFF button.
The Operation lamp (green) will be lit and the air conditioner will start operating.



* The air conditioner controls temperature and airflow rate automatically. Therefore, set temperature or airflow rate settings are not available while the air conditioner is in operation.

3

- To set airflow direction refer to page 11.

4



- When ON/OFF button is pressed again, the air conditioner will stop operating and the Operation lamp will be turned off.




Note

- To prevent water leakage or system failure, do not turn off the power immediately. Wait at least 5 minutes for the drain pump to finish draining residual water from the indoor unit.

Characteristics of Dry Operation

Dry mode repeats the weak cooling operation intermittently to dehumidify the room without dropping the room temperature as much as possible for the prevention of excessive cooling.

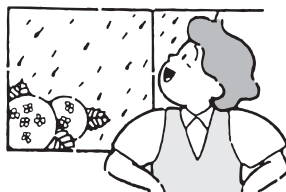

Setback

The Setback function will maintain the room temperature in a specific range during unoccupied periods.

Note

- This function will temporarily start an air conditioner that was previously turned off by the user or turned off from a schedule setting/off timer.
- This function is disabled by default. This function can be changed enable/disable by Main Menu. (Refer to page 32)

For example:

Setback temperature: cool 35°C, Heat 10°C
Recovery Differential: cool -2°C, Heat +2°C


- If the room temperature drops below 10°C, the air conditioner starts operating in Heating automatically. As soon as it reaches 12°C, the air conditioner returns to its original status.
- If the room temperature goes above 35°C, the air conditioner starts operating in Cooling automatically. As soon as it reaches 33°C, the air conditioner returns to its original status.

The differential can be adjusted in the Setback condition menu (Refer to page 34).

The setback temperature can be set on Basic screen during the air conditioner is turned off. Or the setback temperature can be set in the schedule (Refer to page 43).

Operation The setback cannot be enabled when a centralized control equipment is connected.

1

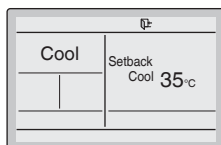

The Setback icon “” blinks when the air conditioner is turned on under the Setback control.


Ventilation Operation When Air Conditioner Interlocked with Heat Reclaim Ventilator

Preparation

- For equipment protection purposes, turn on the power to the air conditioner at least 6 hours before starting the operation.

Operation

1

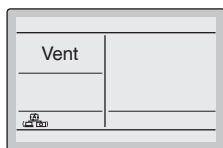

- Press Mode Selector button several times until Vent mode is selected.



* Vent mode is for single operation of Heat Reclaim Ventilator for the season when cooling/heating is unnecessary.

2

- The Ventilation mode can be changed from the Main Menu. (Refer to page 31).

* Ventilation mode: Auto, Energy Reclaim Ventilation and Bypass

3

- The Ventilation rate can be changed from the Main Menu. (Refer to page 30).

* Ventilation rate: Low or High

4



- Press ON/OFF button. The Operation lamp (green) will be lit and the Heat Reclaim Ventilator will start operating.



5



- When ON/OFF button is pressed again, the Heat Reclaim Ventilator will stop operating and the Operation lamp will be turned off.





Setting the Cool/Heat Selection Eligibility

(VRV only)

Setting Changes

Refer to "Cool/Heat Selection Eligibility" on page 19 for an explanation of the cool/heat selection eligibility.

1

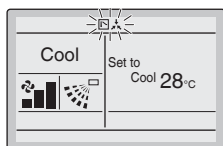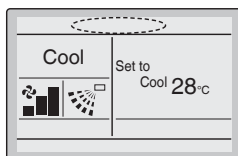

- Press Mode Selector button on the remote controller that has cool/heat selection eligibility for at least 4 seconds. (During backlight lit)
A remote controller will not display "Changeover Under Control" if a cool/heat selection eligibility is granted to the remote controller.
- The icon "Changeover Under Control" on each remote controller of indoor units connected to the same outdoor unit or BS unit will start blinking.





- * Vent mode setting changes are possible regardless of the cool/heat selection eligibility.
- * If a cool/heat selection eligibility is set in the "Cool/Heat selector" (★), all the remote controllers will display the icon "Changeover Under Control". In this case, no cool/heat selection eligibility can be set in the remote controllers.
- ★Refer to the Operation Manual attached to the outdoor unit for the details of the "Cool/Heat selector".

- Set a cool/heat selection eligibility as follows.

Selection Settings

The icon "Changeover Under Control" will blink on all remote controllers when the power is turned on for the first time.


2

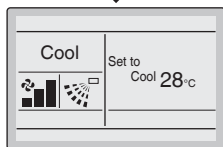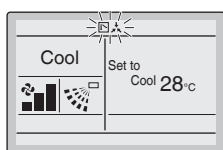

- Press Mode Selector button on the remote controller for which the selection eligibility to be set.
Then the cool/heat selection eligibility will be set and the icon "Changeover Under Control" will disappear.
The icon "Changeover Under Control" will appear on the other remote controllers.



3

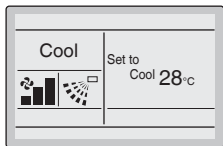

- Press Mode Selector button on the remote controller that has the cool/heat selection eligibility (the remote controller without the icon “”) several times until the desired mode is selected.

The display will change to “Fan”, “Dry”, “Auto”, “Cool”, “Heat” each time the button is pressed.

- The display “Auto” will appear for the Heat Recovery system only.
Simultaneously, the other remote controllers will follow suit and change the display automatically.

Cool/Heat Selection Eligibility

- The “Cool”, “Heat”, “Auto” can be set by only the remote controller that has the cool/heat selection eligibility.
(The display “Auto” will appear for the Heat Recovery System only.)

1.

The remote controller with the selection eligibility
(Icon “”) (Changeover Under Control) is not displayed)

Set to “Cool”, “Heat”, “Dry”, “Auto” mode.



 
Other remote controllers
(Icon “”) (Changeover Under Control) is displayed)

- The system will go into the mode set in the remote controller with the selection eligibility. Other modes are not available.
- However, the system can be switched to “Fan” mode.
In case of “Cool” or “Dry” mode, the system can be switched to “Dry” mode from “Cool” mode and to vice-versa.

2.

The remote controller with the selection eligibility
(Icon “”) (Changeover Under Control) is not displayed)

Set to “Fan” mode.




Other remote controllers
(Icon “”) (Changeover Under Control) is displayed)

- The system cannot be set to other modes except fan mode.

Precautions for Setting Cool/Heat Selection Eligibility

- The cool/heat selection eligibility needs to be set for a single remote controller in the following case.


(Heat Pump System)

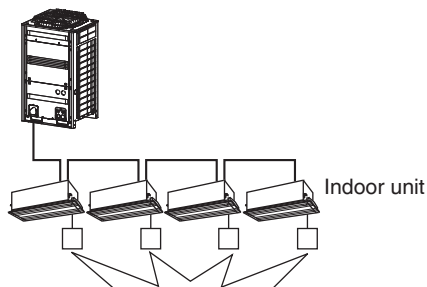

A number of indoor units are connected to a single outdoor unit.

Set the Cool/Heat/Fan mode selection eligibility in one of the remote controllers.

(Heat Recovery System)

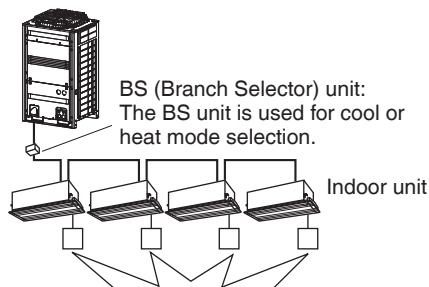


A number of indoor units are connected to a single BS unit.

Set the Cool/Heat/Auto/Fan mode selection eligibility in one of the remote controllers.

Key Lock

Operation Make settings and cancel settings in the Basic screen.

1

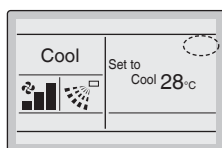


Basic screen

- Continue pressing Menu/Enter button for at least 4 seconds. (During backlight lit)



2

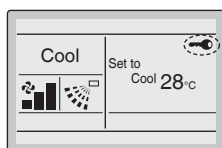

- “” will appear.
All buttons are disabled when the keys are locked.
- To cancel the Key lock, continue pressing Menu/Enter button for at least 4 seconds. (During backlight lit)

Quick Reference of Main Menu Items

■ Main Menu Items

Setting and display items		Description	Reference page
Air Flow Direction (only if the individual airflow function is installed)	Individual setting	Used to set an Airflow direction for maximum 4 flaps individually. • In case of Sprit system, maximum 4 units (unit A, B, C, D) • In case of VRV, maximum 16 units (unit 0 to 15)	25
	Individual setting list	Used to see the table for setting for maximum 4 flaps.	26
	Individual set all reset	Used to clear all of the individual settings.	27
	Air direction range select (only available for floor standing type indoor unit (FVQ series))	Auto swing direction is selectable from 3 patterns to suit the layout of the room. Standard , Right blow or Left blow	27
Quick Start (SPLIT system only)		Used to set the room to a comfortable temperature quickly (unless the system is not in Dry or Fan operation). • The maximum quick cooling/heating operation period is 30 minutes.	28
Ventilation (Ventilation operation settings for Heat Reclaim Ventilator)	Ventilation Rate	Used to set to Low or High	30
	Ventilation Mode	Used to set Automatic , Energy Reclaim Ventilation , and Bypass .	31
Energy Saving Options	Energy Saving list	Enable or Disable can be set up about the following menus.	32
	Setpoint range set	The set temperature range can be restricted. It is possible to restrict the temperature range based on a model and the mode of operation.	33
	Set back condition	Determine the point when air conditioner is turned off again from the setback control. (recovery differential).	34
	Sensing Sensor (low) (only if the sensing sensor is installed) (Note 2, 3)	When no people are detected during a continuously fixed time, the function will automatically change the air conditioning target temperature. If people are detected, it will return to the normal set temperature.	35
	Sensing Sensor (stop) (only if the sensing sensor is installed) (Note 2, 3)	When no people are detected during a continuously fixed time, the function will automatically stop the air conditioner.	36

Setting and display items		Description	Reference page
Energy Saving Options	Setpoint Auto Reset	Even if the set temperature is changed, it returns to the preset temperature after progress of a defined period of time.	37
	Off Timer	After you turn on the air conditioner, it will automatically turn off in a defined period of time. • Possible to set in 10 minutes increments from 30 to 180 minutes.	38
	Electricity consumption	An electricity consumption until now is displayed. This enables you to evaluate the trend of the electricity consumption. Note: This function availability is depending on type of indoor unit. Note: This function is not available in case more than 1 indoor unit are connected in group to the remote controller. Note: Displayed electricity consumption is not result of a kWh measurement, but results from a calculation with running data of the air conditioner. Some factors in this calculation are absolute values, but other factors merely result from interpolations with tolerance. This explains why the readout may deviate from the actual electricity consumption.	39
Schedule	Enable/Disable	Enable or Disable of a schedule function can be changed.	45
	Schedule nr set	The schedule number that must be active can be selected (schedule nr 1, 2 or 3).	41
	Holidays	Convenient holiday settings and temporary closure settings are possible.	42
	Settings	• Set the startup time and operation stop time. • ON: Startup time, cooling and heating setting temperature can be configured. • OFF: Operation stop time, cooling and heating setback setting temperature can be configured. (--: Indicates that the setback function is disabled for this time period.) _: Indicates that the setting temperature and setback setting temperature for this time period is not specified. The last active setting temperature will be utilized. • Up to 5 actions can be set for each day.	43
Filter Auto Clean		This function is available only on the model whose panel has filter auto clean function. For detailed operation refer to the operation manual of these models.	46

Setting and display items		Description	Reference page
Maintenance Information		Used to display the service contact and model information.	47
Configuration	Draft prevention (only if the sensing sensor is installed)	The draft prevention function can be enabled or disabled.	48
	Display	Used to set to standard or detailed display mode. - Display Standard or detailed display - Detailed display settings Selectable from the display room temperature, outdoor air temperature, system or None.	49
	Contrast Adjustment	Used to make LCD contrast adjustment.	51
Current Settings		Used to display a list of current settings for available items.	52
Clock & Calendar	Date & Time	Used to configure date and time settings and corrections. - The default time display is 24H. - The clock will maintain accuracy to within ± 30 seconds per month. - If there is a power failure for a period not exceeding 48 hours, the clock will continue working with the built-in backup power supply.	53
	12H/24H Clock	The time can be displayed in either a 12 hour or 24 hour time format.	55
Language		The displayed language can be selected from the following language. (English/Deutsch/Français/Italiano/Español/Português/Nederlands/Русский/Ελληνικά/Türkçe/Polski)	56

Note: 1. Available setting items vary with the model connected.

Only the available setting items appear in the menu.


2. This function cannot be used at the time of group control.

3. In case of the simultaneous operation system, the system is controlled by the sensing sensor mounted in the master indoor unit.

Menu Items of Sub Remote Controller

If 2 remote controllers are in control of a single indoor unit, the following menu items are not set in the sub remote controller. Set them in the main remote controller.

- Air Flow Direction
- Energy Saving Options
- Schedule
- Setback
- Filter Auto Clean

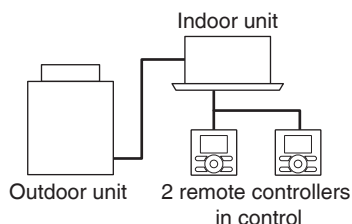


Menu Manipulation

Manipulating the Main Menu Screen

■ Display Method for Main Menu

Operation

1

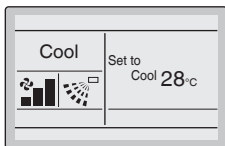


Basic screen

- Press Menu/Enter button.



2

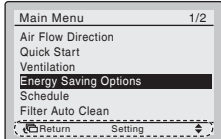


Main Menu screen

- The Main Menu screen will appear.

← Instructions for manipulating the buttons will appear.

3

- Select items from the Main Menu.
 1. Press “▼▲” buttons to select the desired item to be set.
 2. Press Menu/Enter button to display the selected settings screen.

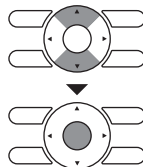

4

- To go back to the Basic screen from the Main Menu screen, press the Cancel button.



Caution


- While setting items, if a button is not pressed for 5 minutes, the screen will automatically go back to the Basic screen.

Individual Airflow Direction

■ Individual Setting


Operation

1

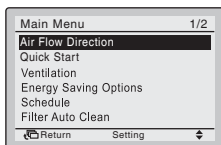


Main Menu screen

- Display the Main Menu screen (Refer to page 24).
- Select **Air Flow Direction** in the Main Menu.
- Press Menu/Enter button to display the Air Flow Direction settings screen.

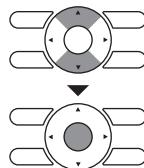


2

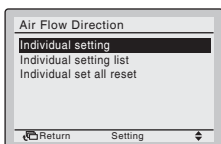

- Select **Individual setting**.
- Press Menu/Enter button.




3

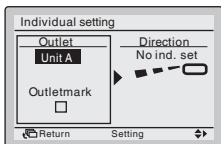


- Press “▼▲” buttons to select the unit and outlet mark.
- In case of four outlets, you can control each one of 4 flaps (ex. the following marks are beside each air outlet. □, □ □, □ □ □, □ □ □ □) individually.
- In case of SPLIT system, maximum 4 units (unit A, B, C, D) can be set.
In case of VRV system, maximum 16 units for each group (unit 0 to 15) can be set.




4

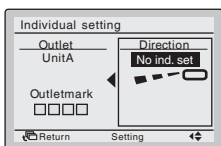

- Press “▶” button to select airflow direction setting.
- Press “▼▲” buttons to change the following settings: **No ind. set** **Position 0** **Position 1** **Position 2** **Position 3** **Position 4** **Swing blocked**.
No ind. set: No Individual Setting.
blocked: Individual airflow is blocked.
- Press Menu/Enter button to confirm the settings and return to the Basic screen.

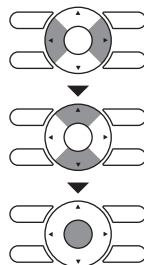

5

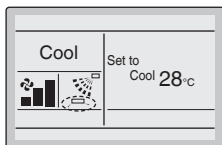


Basic screen

- If individual airflow direction is set, the Individual Airflow Direction icon “” is displayed in the Basic screen.


■ Individual Setting List

Operation

1

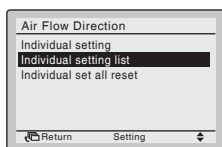


- Display the Air Flow Direction screen (Refer to page 25).
- Press “▲” buttons to select **Individual setting list**.
- Press Menu/Enter button.

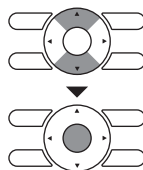

2

Individual setting list		
UnitA		
Outletmark	Air direc.	Indiv.
	Auto	OFF
	Auto	OFF
	Auto	OFF
	Auto	OFF
Return		


- A table shows the current settings.
Press “▲” buttons to go to the next unit.
- Press Cancel button to return to the Main Menu screen.

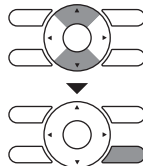


■ Individual Set All Reset

Operation


1

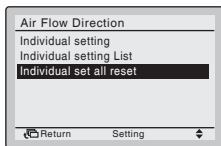


- Display the Air Flow Direction screen (Refer to page 25).
- Press “▼▲” buttons to select **Individual set all reset**.
- Press Menu/Enter button.

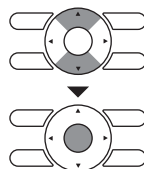

2


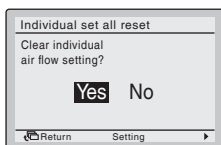


- Press “◀▶” buttons to select **Yes**.
- Press Menu/Enter button to confirm the reset and return to the Main Menu screen.

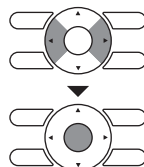


■ Air Direction Range Select (Floor standing type indoor unit only)

- Air direction range can be selected by the remote controller depending on the installed location of the air conditioner.
- Air direction range has the following 3 patterns.

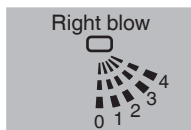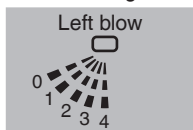


Operation


1

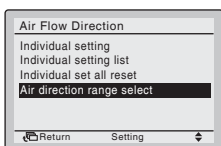


- Display the Air Flow Direction screen (Refer to page 25).
- Press “▼▲” buttons to select **Air direction range select**.
- Press Menu/Enter button.

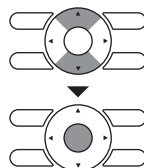


2

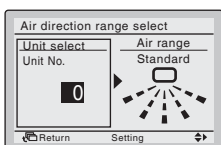

 
- Press “▼▲” buttons to select the Unit No..
- *For simultaneous operation system, individual setup for each indoor unit is possible by connecting the remote controller to each unit at the time of installation.
- For the remote controllers with grouping connection, maximum 16 units (0-15 as unit number) are configurable.




3

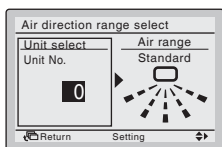


- Press “▶” button to select air range setting.

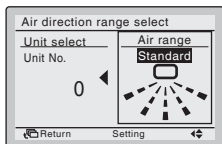

- Set the desired air range from **Standard**, **Right blow** or **Left blow** by using “▼▲” buttons.

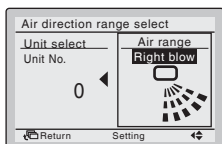

- Press Menu/Enter button to confirm the settings and return to the Basic screen.

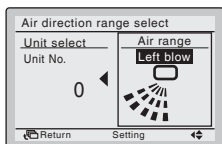


Quick Start (SPLIT system only)


■ Quick Start On

Operation

1

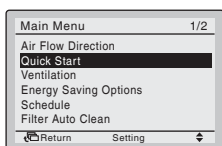

- While operating in Cooling, Heating, or Auto mode, display the Main Menu screen (Refer to page 24).
- Press “▼▲” buttons to select **Quick Start** on the Main Menu screen.

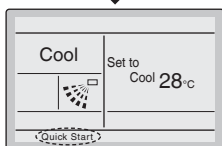



- Press Menu/Enter button to return to the Basic screen.
- “Quick Start” will appear on the Basic screen.
- Quick Start is now on.




■ Quick Start Off

Operation

2

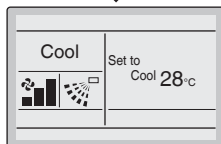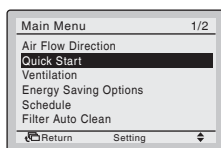

- While Quick Start is displayed on the Basic screen, display the Main Menu screen (Refer to page 24).
- Press “▼▲” buttons to select **Quick Start**. Press Menu/Enter button to return to the Basic screen.
- “Quick Start” will no longer appear on the Basic screen.
- Quick Start is now off.

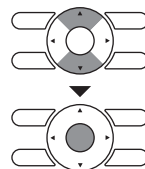

Quick Start

Quick Start

The airflow rate of indoor unit is automatically controlled, increasing the capacity of the outdoor unit and quickly bringing the room to a comfortable temperature.


- Airflow rate display disappear and airflow rate can no longer be switched.
- Cannot be set when in fan and dry modes.
- Quick Start will operate for a maximum of 30 minutes before the air conditioner automatically returns to normal operation.
- Activating mode selector will return the air conditioner to normal operation.
- In heating mode, airflow rate will increase and the air outlet temperature may decrease. Adjust the operation as desired.

Ventilation



■ Display Method for Ventilation Screen

Operation

1

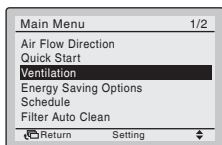


- Display the Main Menu screen. (Refer to page 24.)
- Press “▼▲” buttons to select **Ventilation**. (For models with no ventilation function, **Ventilation** will not be displayed.) Press Menu/Enter button to display the Ventilation screen.

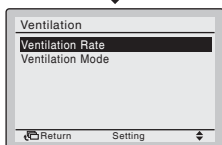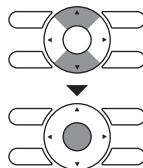


■ Changing the Ventilation Rate

Operation


1

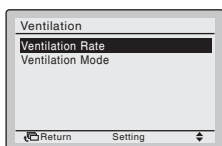

- Display the Ventilation settings screen (Refer to above).
- Press “▼▲” buttons to select **Ventilation Rate**. Press Menu/Enter button to display the Ventilation rate screen.

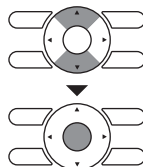

2

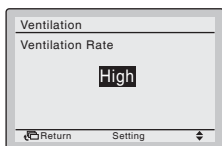


- Press “▼▲” buttons to change the setting to **Low** or **High**.



* Only modes that can be set are displayed.

Low ↔ High

3

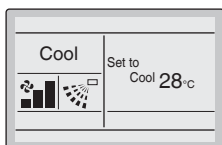


- Select the desired ventilation rate. Press Menu/Enter button to confirm the settings and return to the Basic screen. (Press Cancel button to return to the previous screen without changing the ventilation rate.)




■ Changing the Ventilation Mode

Operation


1

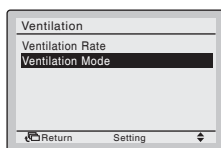

- Display the ventilation screen.
(Refer to page 30.)
- Press “▼▲” buttons to select **Ventilation Mode**. Press Menu/Enter button to display the Ventilation mode screen.

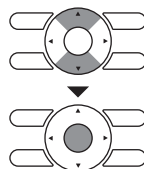

2

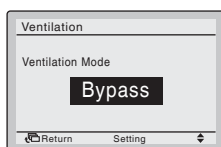


- Press “▼▲” buttons to change the settings in order as shown below.



* Only modes that can be set are displayed.



3

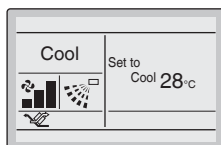

- Select the desired ventilation mode. Press Menu/Enter button to confirm the settings and return to the Basic screen.
(Press the Cancel button to return to the previous screen without changing the ventilation mode.)



Ventilation Mode

Automatic mode

Using information from the air conditioner (cooling, heating, fan and set temperature) and the Heat Reclaim Ventilator unit (indoor and outdoor air temperatures), mode is automatically changed between Energy reclaim ventilation and Bypass.

Energy reclaim ventilation mode

Outdoor air is supplied to the room with undergoing heat exchange.

Bypass mode


Outdoor air is supplied to the room without undergoing heat exchange.

Energy Saving Options



■ Display Method for Energy Saving Options Screen

Operation

1

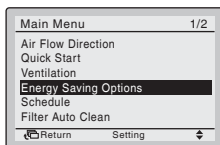


- Display the Main Menu screen. (Refer to page 24.)
- Press "▼▲" buttons to select **Energy Saving Options**. Press Menu/Enter button to display the Energy Saving Options screen.

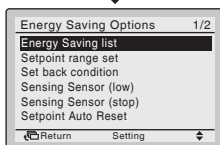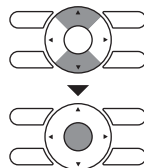


■ Energy Saving List

Operation


1

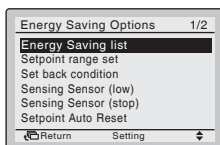


- Display the Energy Saving Options screen (Refer to above).
- Press "▼▲" buttons to select **Energy Saving list**. Press Menu/Enter button to display the Energy Saving List screen.

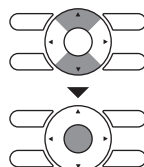


2

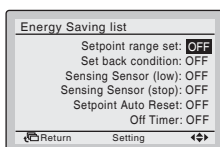


- Press "▼▲" buttons to change the setting to **ON** or **OFF**. (**ON** : Enable, **OFF** : Disable)
- Press "◀▶" buttons to move the cursor. Press Menu/Enter button after selecting the item. The confirmation screen will appear.

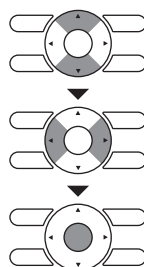

3

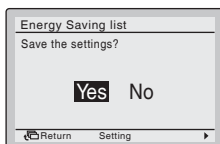


- Press "◀▶" buttons to select **Yes** on the confirmation screen. Press Menu/Enter button to confirm the settings and return to the Basic screen.


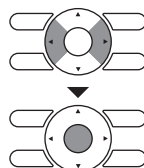


■ Setpoint Range Setting



Operation

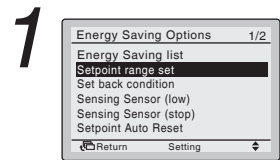


- Display the Energy Saving Options screen (Refer to page 32).
- Press “▼▲” buttons to select **Setpoint range set**. Press Menu/Enter button to display the Setpoint Range set screen.

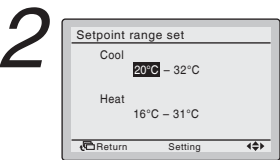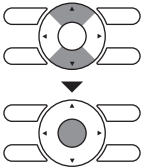

- Press “▼▲” buttons to change the temperature setting range of cooling and heating.
- Press “◀▶” buttons to move the cursor. Press Menu/Enter button after selecting the item. The confirmation screen will appear.

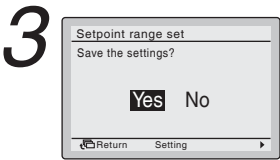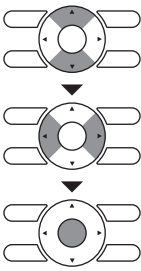


- Press “◀▶” buttons to select **Yes**. Press Menu/Enter button to confirm the settings and return to the Basic screen.


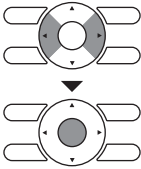


■ Setback Condition



Operation

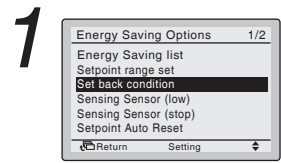


- Display the Energy Saving Options screen (Refer to page 32).
- Press “▼▲” buttons to select **Set back condition**. Press Menu/Enter button to display the Set back condition screen.

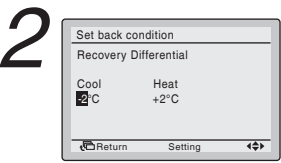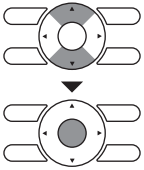

- Press “▼▲” buttons to change the temperature differential of the Setback.
- Press “◀▶” buttons to move the cursor. Press Menu/Enter button after selecting the item. The confirmation screen will appear.

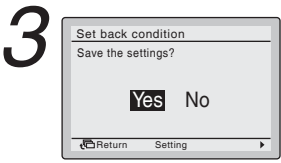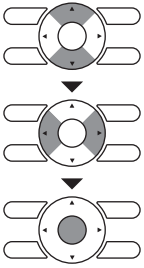

- Press “◀▶” buttons to select **Yes**. Press Menu/Enter button to confirm the settings and return to the Basic screen.

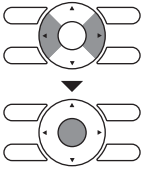


■ Sensing Sensor (low)


This function cannot be used at the time of group control.
In case of the simultaneous operation system, the system is controlled by the sensing sensor mounted in the master indoor unit.

Operation


1

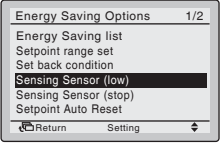

- Display the Energy Saving Options screen (Refer to page 32).
- Press “▼▲” buttons to select **Sensing Sensor (low)**. Press Menu/Enter button to display the Sensing Sensor (low) screen.

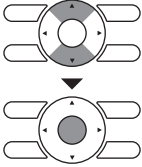


2

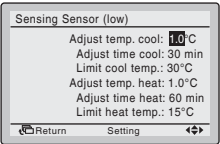


- Press “▼▲” buttons to change the setting value of saving energy operation when the sensor detects the absence.
 - Press “◀▶” buttons to move the cursor. Press Menu/Enter button after selecting the item. The confirmation screen will appear.
- (Example)

Adjust temp cool: 1.0°C
Adjust time cool : 30 min
Limit cool temp : 30°C

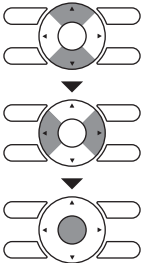


- If it is determined that there is no person in the room by sensor during Cooling Operation, the set temperature will automatically shift by 1°C every 30 minutes until the set temperature is 30°C. (On Basic screen, set temperature does not change.)

3

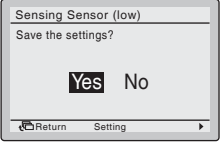


- Press “◀▶” buttons to select **Yes**. Press Menu/Enter button to confirm the settings and return to the Basic screen.

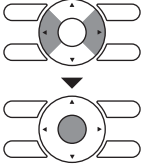



■ Sensing Sensor (stop)

This function cannot be used at the time of group control.
In case of the simultaneous operation system, the system is controlled by the sensing sensor mounted in the master indoor unit.



Operation

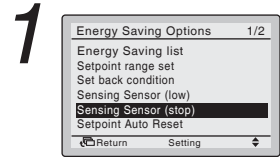


- Display the Energy Saving Options screen (Refer to page 32).
- Press “▼▲” buttons to select **Sensing Sensor (stop)**. Press Menu/Enter button to display the Sensing Sensor (stop) screen.

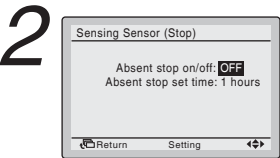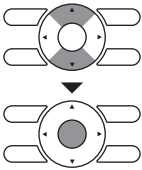

- Press “▼▲” buttons to set the saving energy operation when the sensor detects the absence.
- Press “◀▶” buttons to move the cursor. Press Menu/Enter button after selecting the item. The confirmation screen will appear.

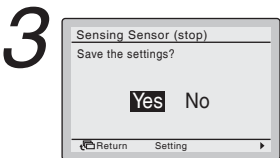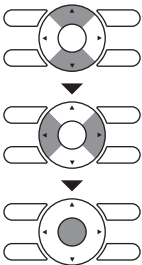


- Press “◀▶” buttons to select **Yes**. Press Menu/Enter button to confirm the settings and return to the Basic screen.


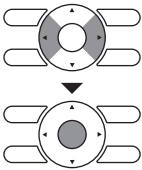


■ Setpoint Auto Reset



Operation

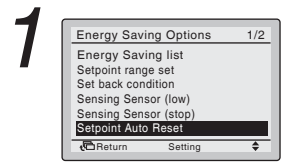


- Display the Energy Saving Options screen (Refer to page 32).
- Press “▼▲” buttons to select **Setpoint Auto Reset**. Press Menu/Enter button to display the Setpoint Auto Reset screen.

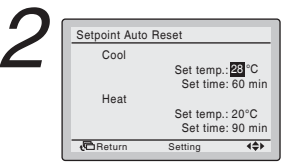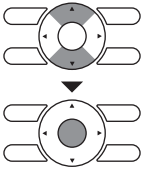

- Press “▼▲” buttons to set preset temperature and timing for the auto reset of the setpoint.
- Press “◀▶” buttons to move the cursor. Press Menu/Enter button after selecting the item. The confirmation screen will appear.

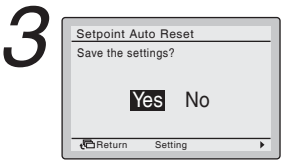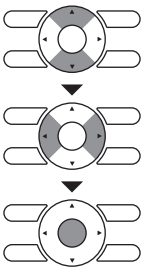


- Press “◀▶” buttons to select **Yes**. Press Menu/Enter button to confirm the settings and return to the Basic screen.

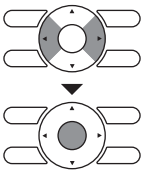


■ Off Timer

Operation


1

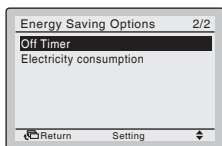


- Display the Energy Saving Options screen. (Refer to page 32.)
- Press “▼▲” buttons to select the **Off Timer**. Press Menu/Enter button to display the Off Timer screen.

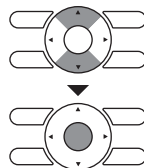


2

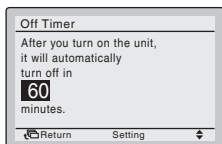


- Press “▼▲” buttons to set the time from operation start until the unit automatically stops. Selections can be made in increments of 10 minutes from 30 to 180 minutes. Holding down the button causes the number to change continuously.
- Select the desired time and press Menu/Enter button. The confirmation screen will appear.

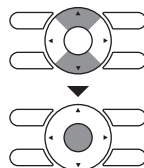

3

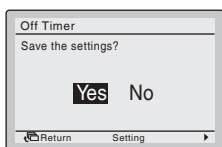


- Press “◀▶” button to select **Yes**. Press Menu/Enter button to confirm the Off Timer settings and return to the Basic screen.


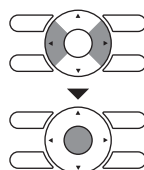


■ Electricity Consumption

Operation This item may not be available depend on the connecting model.

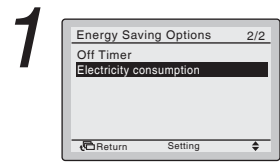


- Display the Energy Saving Options screen (Refer to page 32).
- Press “▼▲” buttons to select **Electricity consumption**. Press Menu/Enter button to display the Electricity consumption screen.

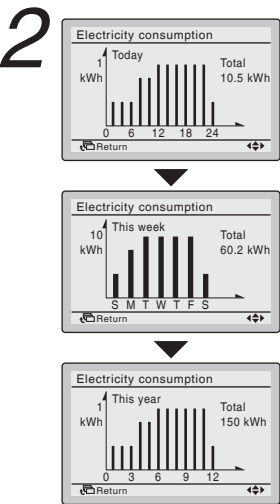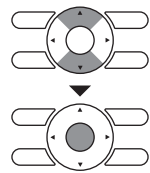

- Press “◀▶” buttons to move the indicating screen.
Today > Yesterday > This week (1 week) > Last week (1 week) > This year (1 year) > Last year
Change the items and values located in the upper right of the indication area using “▼▲” buttons.

Press Cancel button to return to the previous screen.

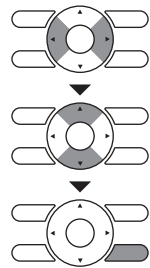


Schedule



■ Display Method for Schedule Screen

Operation The Schedule cannot be enabled when a centralized control equipment is connected.



1

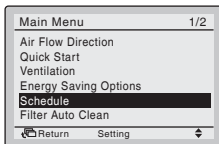


- Display the Main Menu screen. (Refer to page 24.)
- Press “▼▲” buttons to select **Schedule**. Press Menu/Enter button to display the Schedule screen.

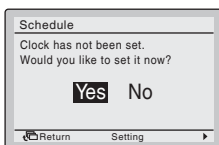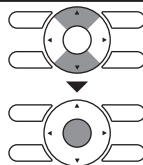


- Before setting the schedule, the clock must be set.
- If the clock has not been set, a screen like the one on the left will appear. Press “◀▶” buttons to select **Yes** and press Menu/Enter button.
- The Date & Time screen will appear.
- Set the current year, month, day, and time. (Refer to “Clock & Calendar” on page 53.)

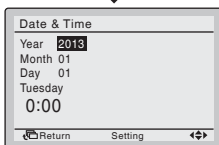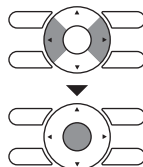

2

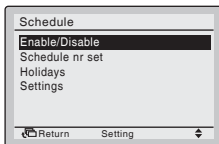

- Press “▼▲” buttons to select the desired item on the Schedule screen and press Menu/Enter button.

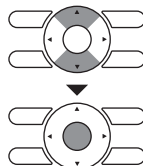

■ Schedule Nr Set

Operation This function can be stored in the schedule of 3 patterns.

1

Schedule

Enable/Disable


Schedule nr set

Holidays

Settings

Return Setting

- Display the Schedule screen. (Refer to page 40.)
- Press “▼▲” buttons to select **Schedule nr set**. Press Menu/Enter button to display the Schedule nr set screen.

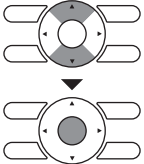

2


Schedule

Schedule nr set

Schedule nr 1

Return Setting

- Press “▼▲” buttons to select **Schedule nr 1**, **Schedule nr 2**, or **Schedule nr 3**. Press Menu/Enter button after selecting the item. The confirmation screen will appear.

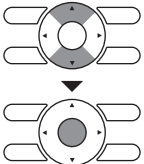

3


Schedule

Save the settings?

Yes No

Return Setting

- Press “◀▶” buttons to select **Yes**. Press the Menu/Enter button to confirm the daily patterns in the schedule and return to the Basic screen.

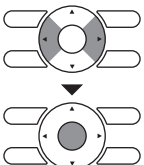

■Holidays

(The schedule timer will be disabled for days that have been set as holiday.)

Operation

1

Schedule

Enable/Disable

Schedule nr set


Holidays

Settings

Return

Setting

- Display the Schedule screen. (Refer to page 40.)
- Press “▼▲” buttons to select **Holidays**. Press Menu/Enter button to display the Holiday setting screen.

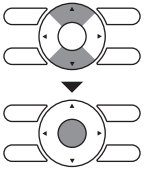

2

Schedule

Holidays

Multiple selection

Sun

Mon

Tue

Wed

Thu


Fri

Sat

Return

Setting

- Press “◀▶” buttons to select the desired day. Press “▼▲” buttons to display “✓” to make the holiday settings. Press “▼▲” buttons to switch the setting between set and release. Multiple days can be selected as holidays. Note: To enable the schedule timer for the day selected as a holiday, the holiday setting must be released.

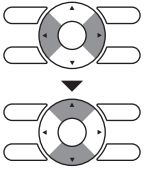

3

Schedule

Holidays

Multiple selection

Sun

Mon

Tue

Wed

Thu

 
Fri

Sat

Return

Setting

- To complete the holiday settings, press Menu/Enter button. The confirmation screen will appear.



4

Schedule

Save the settings?


Yes

No

Return

Setting

- Press “▶” button to select **Yes**. Press Menu/Enter button to confirm the holiday settings and return to the Basic screen.

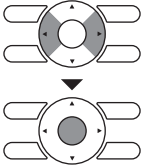

Schedule nr 1				
	Time	Act	Cool	Heat
Sat	8:00	ON	28°C	20°C
	---	---	---	---
Hol	---	---	---	---
	---	---	---	---
Return Setting				


Note:

- Holidays that are set will be displayed on the Schedule screen.


Schedule Settings

Operation

1

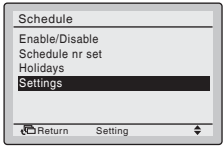


- Display the Schedule screen. (Refer to page 40.)
- Press “▼▲” buttons to select **Settings**. Press Menu/Enter button to display the Schedule screen.

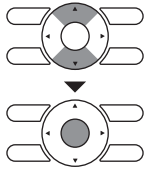


NOTE: The Schedule Settings of the selected schedule number can be changed. To change the schedule number refer to “Schedule Nr Set” on page 41.


2

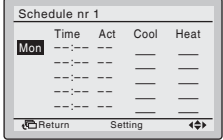

 
- Press “▼▲” buttons to select the day of the week to be set.




3

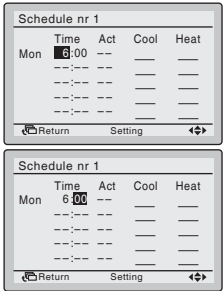


- Set the time for the selected day.
- Press “◀▶” buttons to move the highlighted item and press “▼▲” buttons to set the desired time. Each press of “▼▲” buttons moves the numbers by 1 hour or 1 minute.

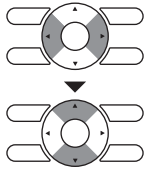

4

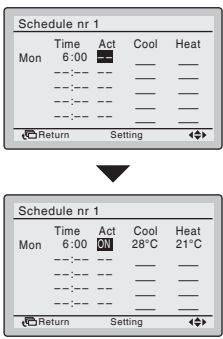

- Press the “◀▶” buttons to move the highlighted item and press “▼▲” buttons to configure ON/OFF/-- settings. --, ON, or OFF changes in sequence when “▼▲” buttons are pressed.
- “Act” column:**
ON : The set temperature can be configured.
OFF: The setback temperature can be configured.
-- : The set temperature and setback temperature become disabled.

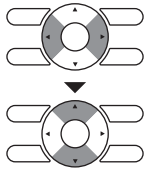

Schedule nr 1				
Time	Act	Cool	Heat	
Mon 6:00	ON	28°C	21°C	
8:00	OFF	35°C	10°C	
--:--	--	--	--	
--:--	--	--	--	
--:--	--	--	--	
Return Setting				

- The cooling and heating set temperature for both ON and OFF (Setback) are configured.

“Cool” and “Heat” column:

“ ”: Indicates that the set temperature and setback temperature for this time period is not specified. The last active set temperature will be utilized.


“--” : Indicates that the setback function is disabled for this time period.

5

Schedule nr 1				
Time	Act	Cool	Heat	
Mon 6:00	ON	28°C	21°C	
8:00	OFF	35°C	10°C	
17:30	ON	28°C	21°C	
22:00	OFF	35°C	10°C	
--:--	--	--	--	
Return Setting				

A maximum of 5 actions per day can be set.

- Press the Menu/Enter button when settings for each day are completed. The confirmation screen will appear.

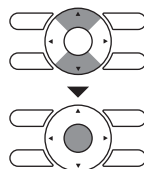

Schedule nr 1				
Time	Act	Cool	Heat	
Mon 6:00	ON	28°C	21°C	
8:00	OFF	35°C	10°C	
17:30	ON	28°C	21°C	
22:00	OFF	35°C	10°C	
--:--	--	--	--	
Return Setting				

Schedule nr 1				
Time	Act	Cool	Heat	
Tue --:--	--	--	--	
--:--	--	--	--	
--:--	--	--	--	
--:--	--	--	--	
Return Setting				

Note:

- To copy the settings for the previous day, press the Mode Selector button so that the existing settings will be copied.

Example: The contents for Monday are copied by pressing the Mode Selector button after selecting Tuesday.




Schedule nr 1				
Time	Act	Cool	Heat	
Tue 6:00	ON	28°C	21°C	
8:00	OFF	35°C	10°C	
17:30	ON	28°C	21°C	
22:00	OFF	35°C	10°C	
--:--	--	--	--	
Return Setting				

6

Schedule	
Save the settings?	
Yes	No
Return Setting	

- Press “◀▶” buttons to select **Yes**. Press the Menu/Enter button to confirm the settings for each day and return to the Main Menu screen.

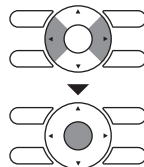





Enabling or disabling the schedule

Operation


1

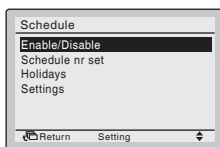


- Display the Schedule screen.
(Refer to page 40.)
- Press “▼▲” buttons to select **Enable/Disable**.
Press Menu/Enter button to display the Enable/Disable screen.

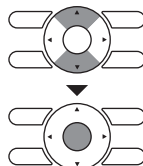

2

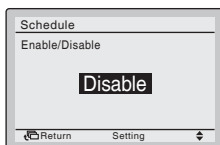


- Press “▼▲” buttons to select **Enable** or **Disable** on the Enable/Disable screen.
Press Menu/Enter button after selecting the item.
The confirmation screen will appear.

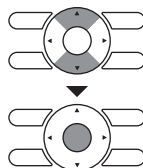


NOTE: The Schedule number selected is enabled.
To change the schedule number see “Schedule Nr Set” on page 41.

3

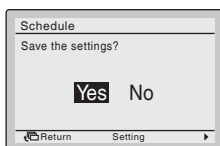


- Press “◀▶” buttons to select **Yes**.
Press Menu/Enter button to confirm the enable/disable setting for the schedule and return to the Basic screen.

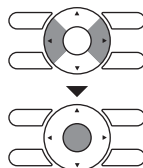


Filter Auto Clean

Operation


1

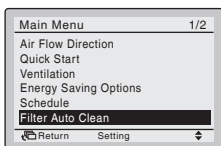

- Display the Main Menu screen.
(Refer to page 24.)
- Press “▼▲” buttons to select **Filter Auto Clean** and press Menu/Enter button.

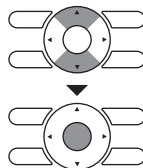

2

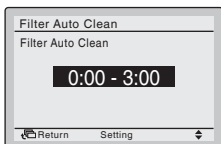


- Filter Auto Clean time zone setting can be set.
- This function is available only on the model whose panel has Filter Auto Clean function.
- For detailed operation, refer to the operation manual of these models.

Maintenance Information


■ Display Method for Maintenance Information

Operation


1

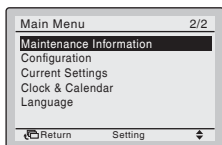

- Display the Main Menu screen.
(Refer to page 24.)
- Press "▼▲" buttons to select **Maintenance Information** and press Menu/Enter button.

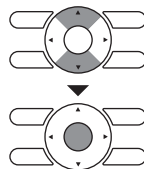

2

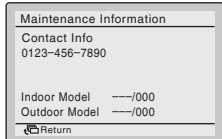

- The phone number for the contact is displayed at the top of the screen.
(If it has not yet registered by installer, it will not displayed.)
 - The model name of the indoor and outdoor units of your product will be displayed on the bottom of the screen.
(For some models the product code may be displayed instead of model name.)
- * The model name will not displayed if the Printed Circuit Board of the air conditioner has been replaced.

* The Malfunction (Error) code history may also be displayed.
If it is not blinking, the unit is working properly.
The Malfunction (Error) code history is no longer displayed if you press ON/OFF button for more than 4 seconds.




Configuration


■ Display Method for Configuration Screen

Operation

1

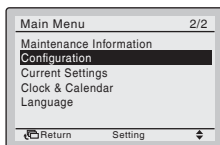


- Display the Main Menu screen. (Refer to page 24.)
- Press “▼▲” buttons to select **Configuration**. Press Menu/Enter button to display the Configuration screen.

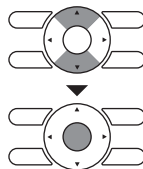


■ Draft prevention

Operation


1

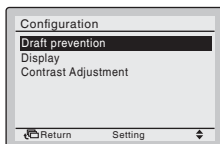


- Display the Configuration screen. (Refer to above.)
- Press “▼▲” buttons to select **Draft prevention**. Press Menu/Enter button to display the Draft prevention screen.

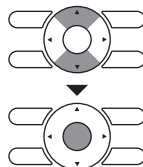


2

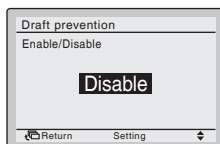


- Press “▼▲” buttons to select **Enable** or **Disable**. Press Menu/Enter button after selecting the item. The confirmation screen will appear.

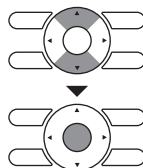

3

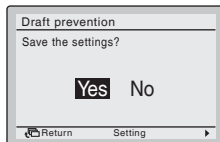

- Press “◀▶” buttons to select **Yes**. Press Menu/Enter button to confirm the enable/disable setting for the draft prevention and return to the Basic screen.

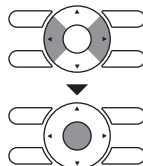


■ Display


Display Mode

Operation


1

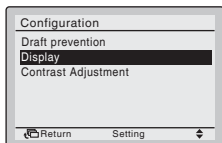


- Display the Configuration screen. (Refer to page 48.)
- Press “▼▲” buttons to select **Display**. Press Menu/Enter button to display the Display screen.

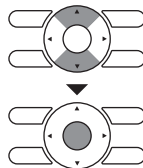


2

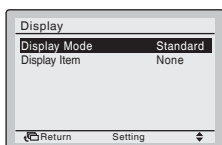


- Press “▼▲” buttons to select **Display Mode**. Press Menu/Enter button to display the Display Mode screen.

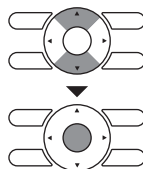

3

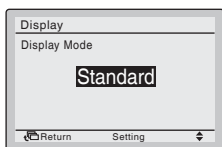

- Press “▼▲” buttons to select **Standard** or **Detailed**.
- Then, press Menu/Enter button to confirm settings and return to the Basic screen.

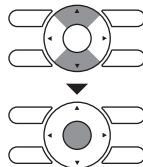

Setting the detailed display item selection

Operation

1

Display

Display ModeStandard

Display ItemNone

ReturnSetting

- Display the Display screen. (Refer to page 49.)
- Press “▼▲” buttons to select **Display Item**. Press Menu/Enter button to display the Display Item screen.

2

Display

Display Item

None

ReturnSetting

- Press “▼▲” buttons to display the following.

None

Outdoor Air Temp

System

Room Temp
- Be sure to read the following notes regarding display of room temperature and outdoor air temperature.

Room Temp

..... The temperature detected near the remote controller.
The temperature may be affected by the location of the remote controller.

Outdoor Air Temp


..... The temperature detected near the outdoor unit.
The temperature may be affected by factors such as the location of the outdoor unit (in direct sunlight, e.g.) and unit operation during defrosting.

- After setting, press Menu/Enter button to confirm settings and return to the Basic screen.


■ Contrast Adjustment

Operation


1

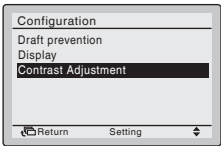


- Display the Configuration screen. (Refer to page 48.)
- Press “▼▲” buttons to select **Contrast Adjustment**. Press Menu/Enter button to display the Contrast Adjustment screen.

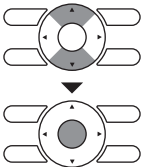

2

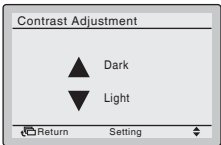

- On the Contrast Adjustment screen, press “▼▲” buttons until you reach the desired contrast. After setting, press Menu/Enter button and return to the Basic screen.

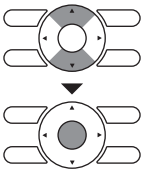


Current Settings


■ Manipulating the Current Settings

Operation


1

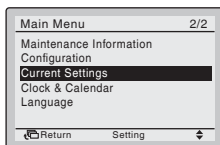


- Display the Main Menu screen.
(See page 24.)
- Press “▼▲” buttons to select **Current Settings** and press Menu/Enter button.

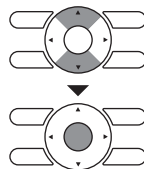

2

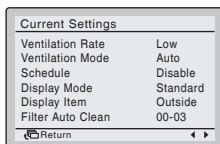

- A list of the current setting status will appear.
Press “◀▶” buttons to go to the next item.
- Press Cancel button to return to the Main Menu screen.

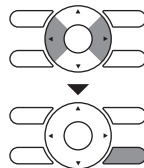

Display items

Ventilation Rate	Display Mode
Ventilation Mode	Display Item
Schedule	Filter Auto Clean
Quick Start	


* Display items may differ depending on the model.
Only the items that can be set are displayed.

Clock & Calendar


■ Display Method for Clock & Calendar Screen

Operation

1

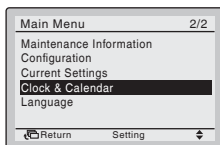


- Display the Main Menu screen. (Refer to page 24.)
- Press “▼▲” buttons to select **Clock & Calendar**. Press Menu/Enter button to display the Clock & Calendar screen.

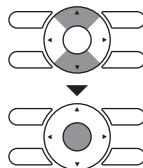


■ Date & time

Operation


1

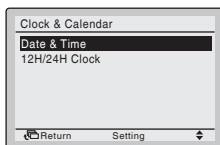


- Display the Clock & Calendar screen. (Refer to above.)
- Press “▼▲” buttons to select **Date & Time**. Press Menu/Enter button to display the Date & Time screen.

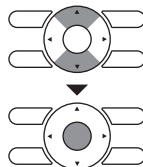


2

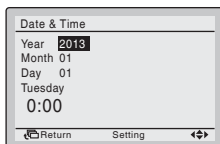


- Select “Year” with “◀▶” buttons. Change the year with “▼▲” buttons. Holding down the button causes the number to change continuously.

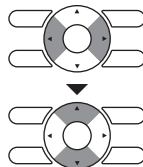


3

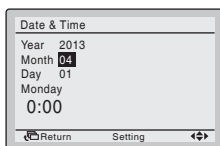


- Select “Month” with “◀▶” buttons. Change the month with “▼▲” buttons. Holding down the button causes the number to change continuously.

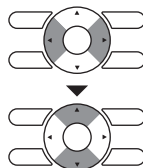


4

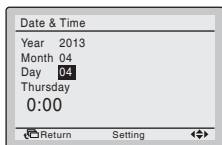


- Select "Day" with "◀▶" buttons.
Change the day with "▼▲" buttons.
Holding down the button causes the number to change continuously.
Days of the week change automatically.

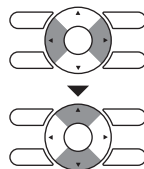


5

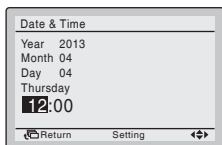


- Select "Hour" with "◀▶" buttons.
Change the hour with "▼▲" buttons.
Holding down the button causes the number to change continuously.

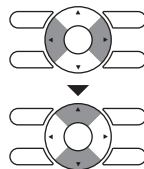


6

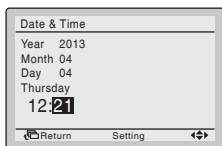

- Select "Minute" with "◀▶" buttons.
Change the minute with "▼▲" buttons.
Holding down the button causes the number to change continuously.
- Press Menu/Enter button.
The confirmation screen will appear.

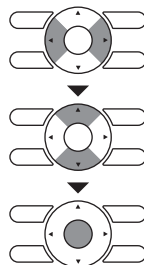


7

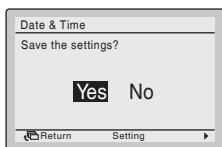


- Press "◀▶" button to select **Yes**.
Press Menu/Enter button to confirm the clock and return to the Basic screen.

* When setting the schedule, the display returns to the Schedule screen.


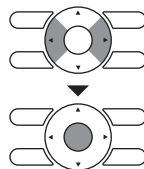


■ 12H/24H Clock



Operation

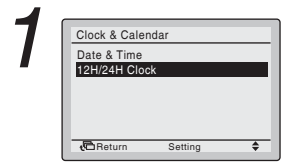


- Display the Clock & Calendar screen. (Refer to page 53.)
- Press “▼▲” buttons to select **12H/24H Clock**. Press Menu/Enter button to display the 12H/24H Clock screen.

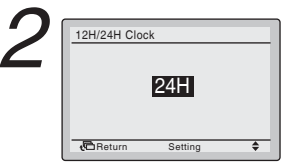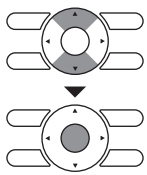

- By default, the time display is set to the 24H format.
- Press “▼▲” buttons to select **12H** or **24H**.
 - Press Menu/Enter button after selecting the item. The confirmation screen will appear.

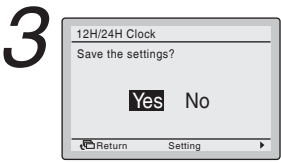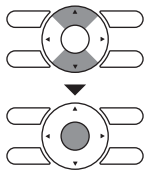

- Press “◀▶” buttons to select **Yes**. Press the Menu/Enter button to confirm the 12H or 24H and return to the Main Menu screen.

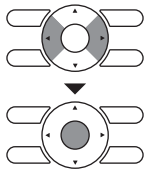


Language


■ Selectable Languages

Operation


1

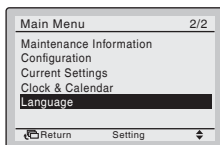


- Display the Main Menu screen. (Refer to page 24.)
- Press “▼▲” buttons to select **Language** and press the Menu/Enter button.

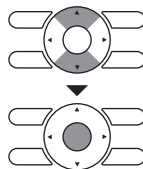

2

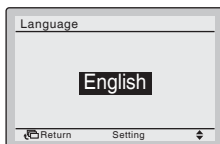

- Press “▼▲” buttons to select the preferred language from following.
English/Deutsch/Français/Italiano/Español/
Português/Nederlands/Русский/Ελληνικά/Türkçe/
Polski
- Press Menu/Enter button to confirm settings and return to the Basic screen.

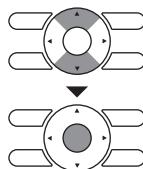


Maintenance

Reset Filter Indicator

Operation

1

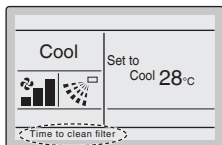

- When the time to clean the filter or element has come, one of the following messages will appear on the bottom of the Basic screen.
 - “Time to clean filter”
 - “Time to clean filter & element”
 - “Time to clean element”


- Wash, clean, or replace the filter or element.
For details, refer to the operation manual attached to the indoor unit.

2



- Reset the filter indicator when the filter or element is washed, cleaned, or replaced.
- Press Menu/Enter button.
The Main Menu screen will appear.



3

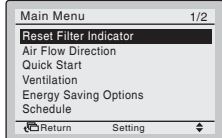

- Press “▼▲” buttons to select **Reset Filter Indicator** and press Menu/Enter button.

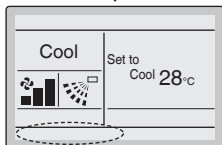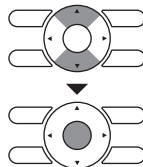

- The message shown in Step 1 will disappear from the Basic screen.



Caution

- **Do not wash the remote controller.**
Doing so may cause electric leakage and result in electric shocks or a fire.
 - **Be sure to stop the operation of the air conditioner and turn off the power at the time of maintenance.**
Failure to do so may result in electric shocks or injury.
-

Cleaning of Remote Controller

- Wipe the surface part of the remote controller with a dry cloth when it become dirty.
- If the dirt on the surface cannot be removed, soak the cloth in neutral detergent diluted with water, squeeze the cloth tightly, and clean the surface. Wipe the surface with a dry cloth then.

Note

- Do not use any paint thinner, organic solvent, or strong acid.



Warning

- **Do not use flammable materials (e.g., hairspray or insecticide) near the air conditioner.**
Do not clean remote controller with organic solvents such as benzine or paint thinner.
The use of organic solvents may cause crack damage to the product, electric shocks or a fire.
-

Reference Information

Malfunction (Error) code Display

■ Contact Your Dealer in the Following Cases




Warning

- When the air conditioner is malfunctioning (e.g., giving off a burning odor), stop the air conditioner and turn off the power.

Continued operation under such circumstances may result in failure, electric shocks or a fire.
Contact your local dealer.

Operation

1

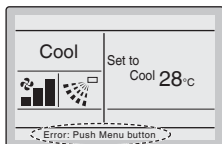

- If a malfunction occurs, either one of the following messages will appear on the Basic screen during operation.


“Error: Push Menu button.”

* The Operation lamp will blink.


“Warning: Push Menu button.”

* The Operation lamp will not blink.

- Press Menu/Enter button.

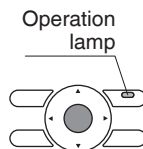

2

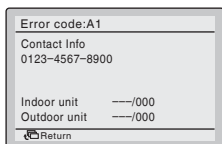

- The Error code blinks and the contact address and model name will appear.
- Notify your local dealer of the Error code and Model name.

After-sales Service



Warning

- **Do not disassemble, modify, or repair the remote controller.**
It may cause electric shocks or a fire.
Consult your local dealer.
 - **Do not relocate or reinstall the remote controller by yourself.**
Improper installation may cause electric shocks or a fire.
Consult your local dealer.
-

■ Advise the Repairer of the Following Items

- Model name
- Date of installation
- Failure conditions: As precise as possible.
- Your address, name, and telephone number

■ Relocation

The relocation of the remote controller requires special technology. Consult your local dealer.
Actual expenses required for the relocation of the remote controller will be charged.

■ Inquiry about After-sales Service

Contact your local dealer.

Memo

DAIKIN INDUSTRIES, LTD.

Head office:

Umeda Center Bldg., 2-4-12, Nakazaki-Nishi,
Kita-ku, Osaka, 530-8323 Japan

Tokyo office:

JR Shinagawa East Bldg., 2-18-1, Konan,
Minato-ku, Tokyo, 108-0075 Japan