

urmet

INDOOR STATIONS



miro

HAND-FREE VIDEO DOORPHONE

- Possibility of connection with other indoor stations
- Automatic door opener service
- Auto-on function
- Possibility of connection with existing 2Voice system
- Compact
- Built-in induction loop for hearing-aid users
- Two integrated wireless Yokis commands

1750/5 - 1750/6

URMET IS IN YOUR LIFE




miro
HAND-FREE VIDEO DOORPHONE
1750/5 - 1750/6

INDOOR STATIONS

DIGITAL SYSTEMS

2 voice

Components description and features:

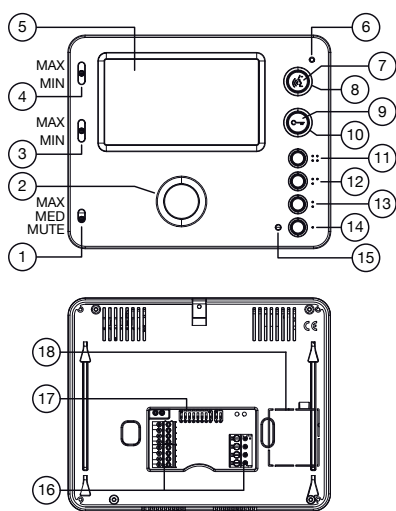


1750/5 - 1750/6

- 16:9 colour monitor display 4.3"
- Colour: polished white
- Call volume regulation
- Ringer selection for outdoor call and floor call
- MUTE function
- Brightness and colour adjustment
- Door opener button and 3 additional buttons for additional functions (entrance opening, staircase light control, exchange call, etc.)
- Second driveway door opening
- Call and other active functions warning LED
- Possibility to make 3 intercom calls
- Metal bracket for wall mounting with provision for installation with 503 flush-mounting boxes and round 60 mm 2.362 in dia. boxes
- Programming with dip-switch
- Integrated induction loop for hearing-aid users
- Wall mounting or flush-mounting
- 2 free push button to connect to E2BPP for 2 wireless Yokis scenarios
- Panic call
- Call repeater



Dimensions: 6.299 x 5.078 x 0.905 in | 160 x 129 x 23 mm - **1.** Call volume adjustment (MAX, MEDIUM; MUTE) - **2.** Call and conversation speaker - **3.** Display brightness adjustment - **4.** Display colour intensity adjustment - **5.** Display 4.3" format 16:9 - **6.** Microphone - **7.** Button used to activate/deactivate audio - **8. 10.** Green LED under the button - **9.** Door opener button - **11.** Button to connect to Yokis devices; contacts Y1, Y2: max 50 mA @ 24 Vcc - **12.** Button to connect to Yokis devices; contacts X1, X2: max 50 mA @ 24 Vcc - **13. 14.** Button: see button function table - **15.** Multicolour indicator LED - **16.** Terminals for connecting to the system - **17.** Configuration dip switch: n.1 of SW1, defines the video door phone operating mode: OFF "Hands Free" (default) / ON "Push to talk"; n.2+8 of SW1, define the apartment number in the column; n.1+2 of SW2, define the station number in the apartment - **18.** Door to be removed in case of in-out connection with Ref. accessory 1750/50.

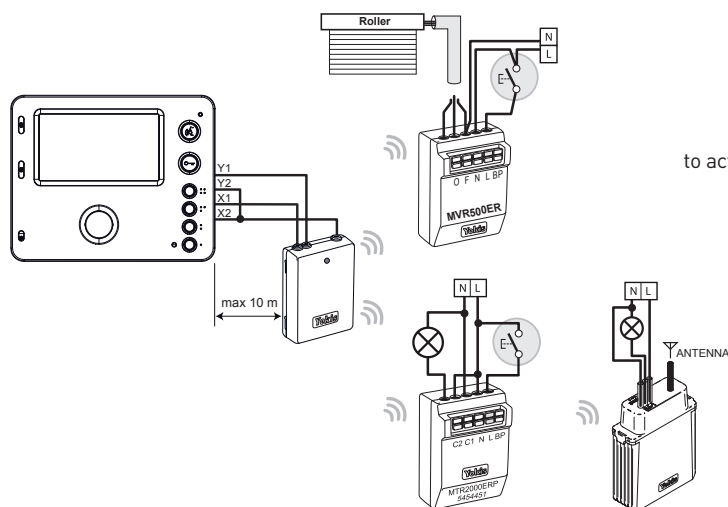

Connection of a E2BPP module to the video door phone for the centralisation of lights and rollers

After suitably programming the Yokis devices, it will be possible: to activate the centralised closing of the rollers with a button (for example: ●●); a second button (for example: ●●) will activate the turning off of the lights. For more information on **Yokis** products, please visit www.yokis.com



urmet

URMET S.p.A.
Via Bologna, 188/C | 10154 TORINO (ITALY)
Switchboard Phone +39-011.24.00.000
Export Dept. Phone +39-011.24.00.250/256
Fax +39-011.24.00.296
www.urmet.com | info@urmet.com
Customer Service +39-011.23.39.810